



## FUEL SYSTEM

## PART LIST

PART	QTY	PART NUMBER	DESCRIPTION
112	1	94400T7L	Serbatoio ds / Right tank
113	2	94400T7 tappo	Tappo serbatoio / Tank cap
114	2	944RSE10	Raccordo portagomma / Connector
115	2	944RSE10D	Dado / Nut
117	1	94400T7R	Serbatoio ds / Right tank
122	2	6-K-1-56	Fuel pipe # 2
123	2	6-K-1-57	Fuel pipe # 3
124	4	SF520	Tubo carburante / Fuel pipe L =170 mm
125	24	93020016	Fascetta / Hose Clamp
126	1	944RD-14M	Fuel tap
127	2	SL082	Tubo carburante / Fuel pipe L= 270 mm
129	1	94414	Electric fuel pump
130	1	944RA18N	90° pipe fitting
131	2	944RA1810	Pipe fitting
133	1	6-K-1-60	Tubo alluminio carburante / Aluminium fuel pipe
134	1	SF521	Tubo carburante / Fuel pipe L = 120 mm
135	2	6-K-1-55	Fuel vent connector
136	2	944RR4-M5	Raccordo rapido M5 / Fast lock connection M5
137	2	SF524	Fuel tank vent
139	2	96705203-16	"VDO" indicator
140	2	96705203-16a	"VDO" indicator rubber washer
141	2	96705203-16b	"VDO" indicator threaded washer
142	2	6-K-1-61	Fuel pipe # 1
143	4	SF529	Tubo carburante / Fuel pipe L = 40 mm
148	10	91UA0616A	Vite / Bolt UNI 5739 6x16
149	8	91UM0624	Rondella piana / Washer 6x24
160	1	94000206	Fuel filter
161	2	944RA1410C	Raccordo portagomma / Connector
162	1	SF521Z	Tubo carburante / Fuel pipe L = 120 mm
219	6	91UM0612	Rondella piana / Washer 6x12
220	6	91UE06	Dado autobloccante / Stopnut M6 DIN982
251	10	91UC05016	Vite esagono incassato / bolt ISO 7830 A2 5x16
252	1	94510010	Shock ring 1080 HD
253	1	6-B-1-51L	Left main gear cover
254	1	6-B-1-51R	Right main gear cover
255	1	6-B-1-52	Main gear fairing connection
256	4	AN3-04A	Vite/Bolt AN4-04A